

6. Cable Management

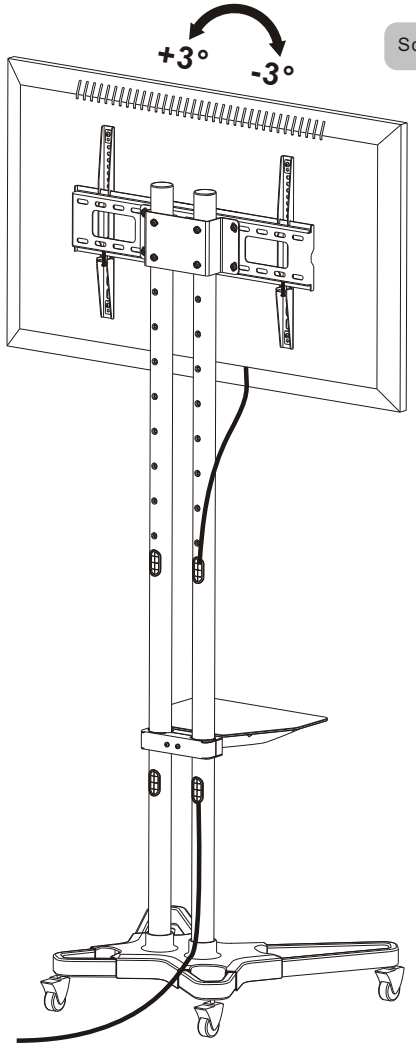

Screen level adjustment: -3°~+3°

Run the cable through the columns using cable management holes.

Maintenance
- Check that the bracket is secure and safe to use at regular intervals(at least every three months).
- Please contact your dealer if you have any questions.

INSTALLATION MANUAL

Flat Panel Mobile Cart

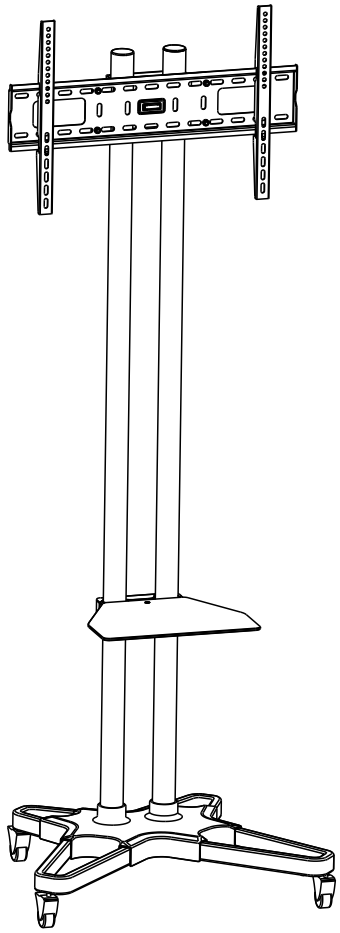

CAUTION: DO NOT EXCEED RATED LISTED WEIGHT CAPACITY. SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!

EMW1021	200x200 300x300 400x200 400x400 600x400	70" MAX	TV 70kg (154lbs) RATED DVD 8kg (17.6lbs) RATED

ISSUED: JAN. 2013

NOTE: Read the entire instruction manual before you start installation and assembly.

⚠ WARNING

- Do not begin the installation until you have read and understood the instructions and warnings contained in this installation sheet. If you have any question regarding any of the instructions or warnings, please contact your local distributor.
- This mounting bracket was designed to be installed and utilised ONLY as specified in this manual. Improper installation of this product may cause damage or serious injury.
- Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the items, this greatly reduces their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

IMPORTANT: Ensure you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, telephone your local distributor for a replacement.

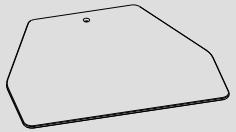
glass shelf (x1)
A


universal plate (x1)
B


fix plate (x1)
C

adapter bracket (x2)
D


column (x2)
E

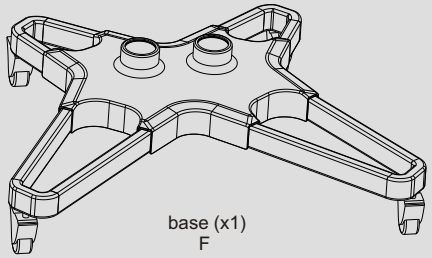
base (x1)
F

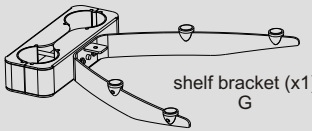
shelf bracket (x1)
G

top cover (x2)
H

Package M

M5x14 (x4)
M-A

M6x14 (x4)
M-B

M8x20 (x4)
M-C

M6x30 (x4)
M-D

M8x30 (x4)
M-E

washer (x4)
M-F

small spacer (x8)
M-G

big spacer (x4)
M-H

Package

M8x15 (x4)
P-A

M8x20 (x4)
P-B


M10x35 (x2)
P-C


M5x15 (x1)
P-D

plastic bush (x1)
P-E

D8 washer (x8)
P-F

D10 washer (x2)
P-G

5mm Allen key (x1)
P-H

8mm Allen key (x1)
P-I

1. Attaching the Base to the Column

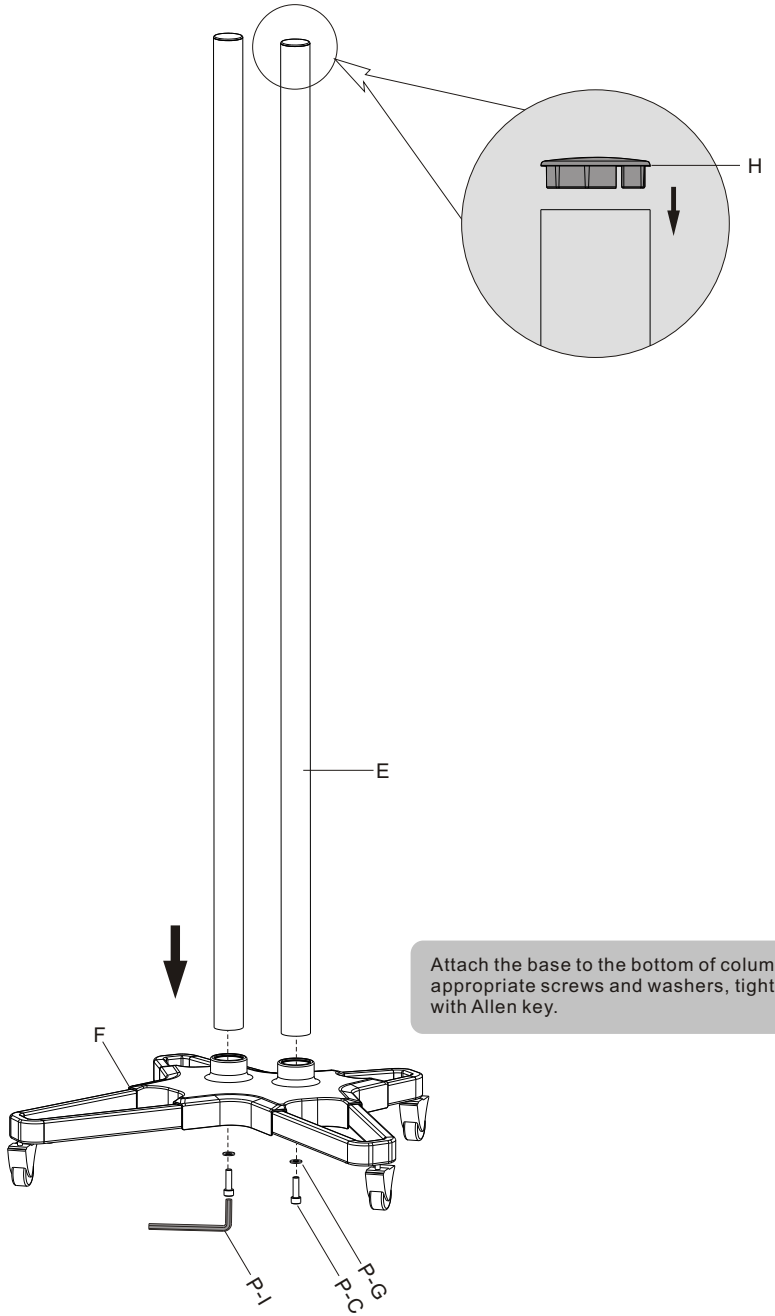

Attach the base to the bottom of columns using appropriate screws and washers, tighten screws with Allen key.

2. Installing the Shelf Bracket and the Universal Plate

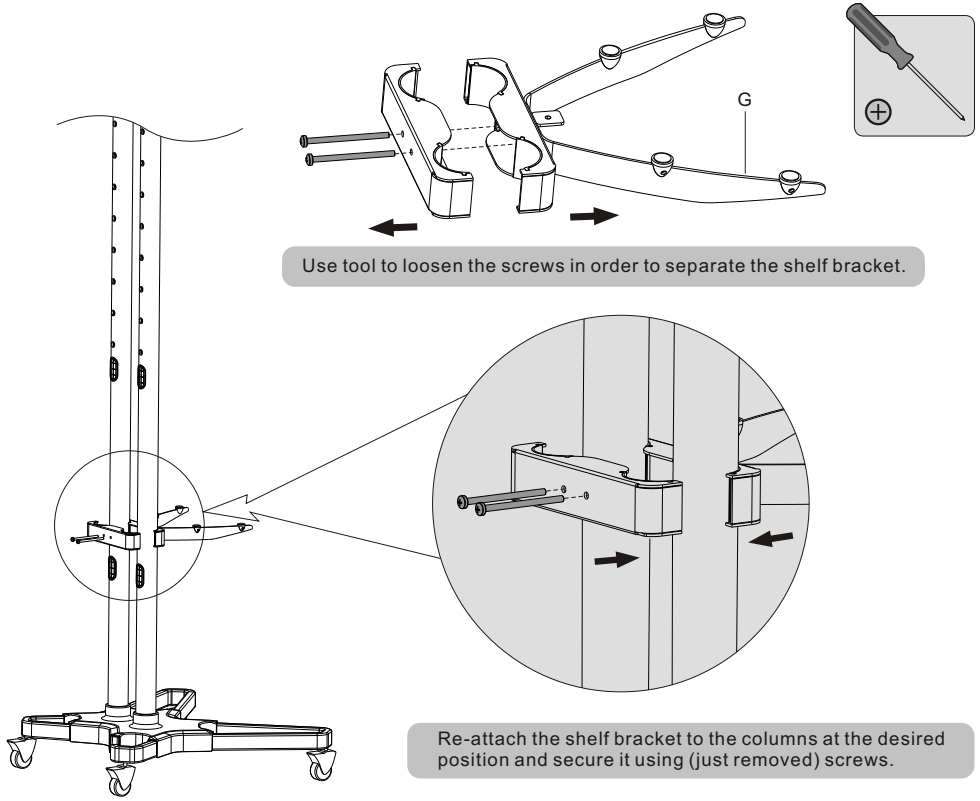

Use tool to loosen the screws in order to separate the shelf bracket.

Re-attach the shelf bracket to the columns at the desired position and secure it using (just removed) screws.

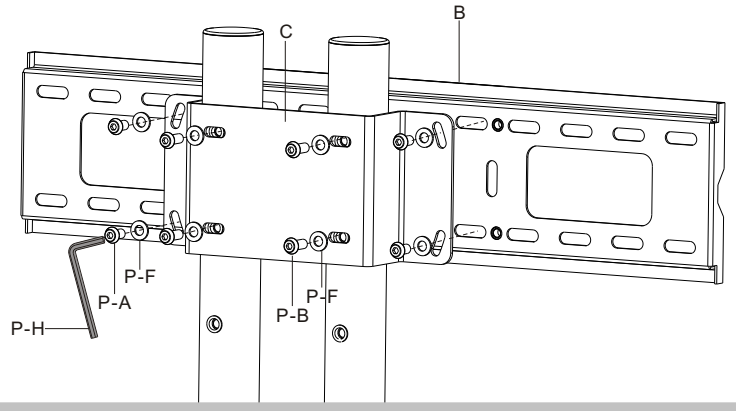

- Attach the fixed plate to the columns at the desired position and secure it using appropriate screws and washers.
- Attach the universal plate to the fixed plate using appropriate screws, washers and nuts.

3. Installing the Glass Shelf

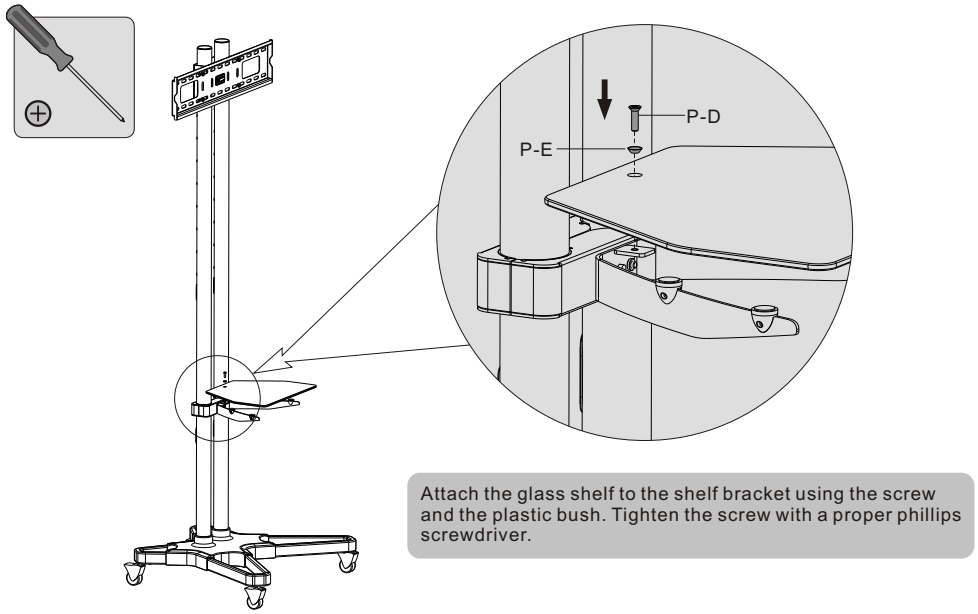

Attach the glass shelf to the shelf bracket using the screw and the plastic bush. Tighten the screw with a proper phillips screwdriver.

4. Installing the Adapter Brackets

4-1 For Flat Back Screen

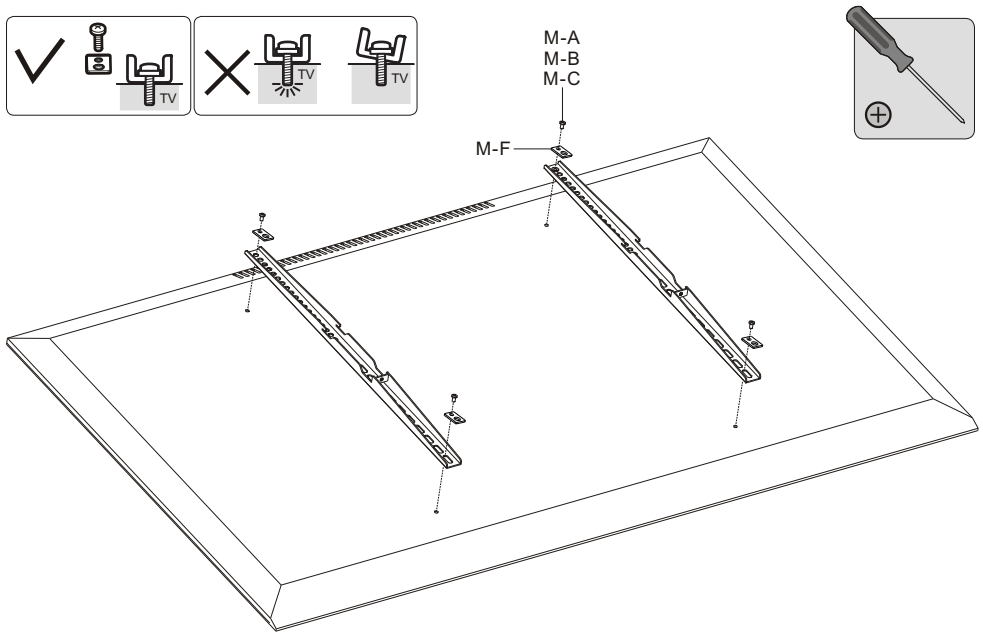

4-2 For Recessed Back Screen or to Access A/V Inputs

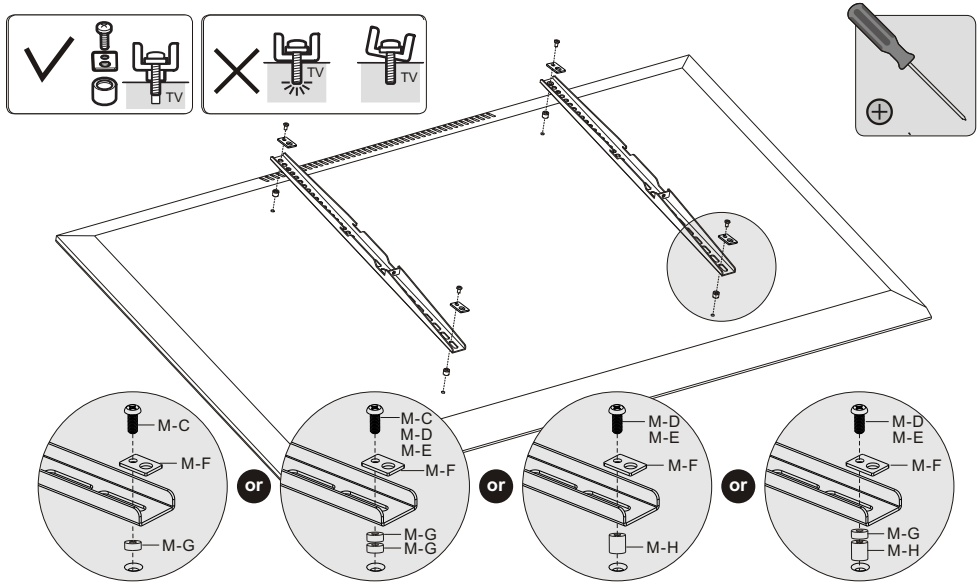

Note: Choose appropriate screws, washers and spacers (if necessary) according to the type of screen.

- Position the adapter brackets as close as possible to the center of the display.
- Screw the adapter brackets onto the display.

Tighten all screws but do not over tighten.

5. Hang the Display onto the Top Plate

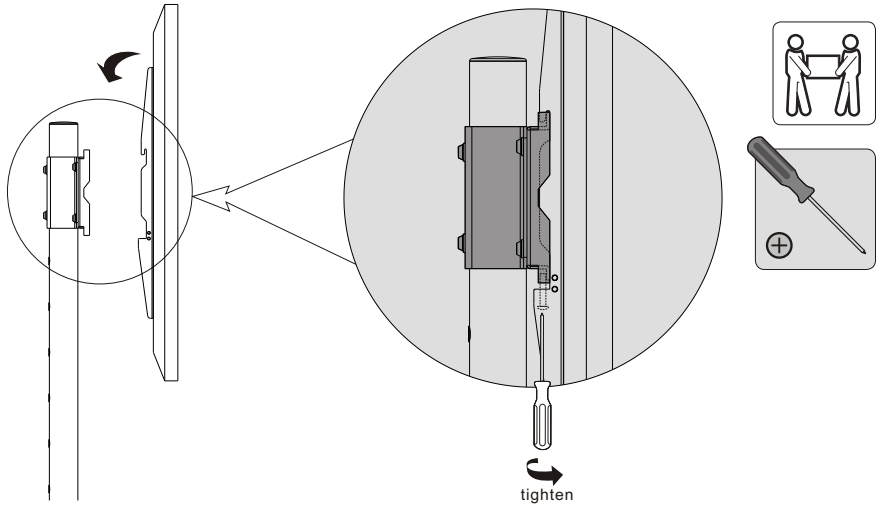

Tighten the bottom screws to secure the bracket to the universal plate.